

KETTLER

Henley Gazebo







 





 


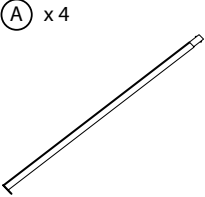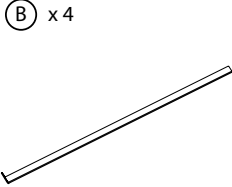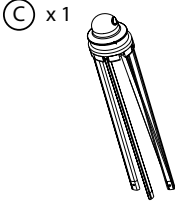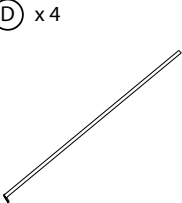

08321



IMPORTANT

PLEASE KEEP THIS BOOKLET FOR FUTURE REFERENCE.
THIS IS IMPORTANT INFORMATION REGARDING THE USE AND
CARE OF YOUR GARDEN FURNITURE.

Parts List

 A x 4	 B x 4	 C x 1	 D x 4		
 E x 4	 F x 8	 G x 4	 H x 4	 I x 4	
 J x 8	 K x 16	 L x 1	 M x 1	 N x 4	 O x 1
 P x 4	 Do not discard any of the packaging until you have checked that you have all the parts and the pack of fixings.				

Helpful advice before you begin:




1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
3. Assemble this product on a soft surface.
4. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
5. Keep fittings out of children's reach.
6. Do not use any other tools other than those recommended to build this product.
7. Please do not use substitute parts. Use only additional or replacement parts supplied by Kettler.
8. In the unlikely event that this product has missing or damaged parts, please visit our website www.kettler.co.uk

Assembly



Overview



This product requires a minimum of 2 people to assemble. Working at height should only be done by a competent person. Please read the assembly instructions thoroughly before assembly. Assemble all fixings finger tight and only tighten fully when all assembly stages complete. We recommend this product is secured to the floor (fixings not included).

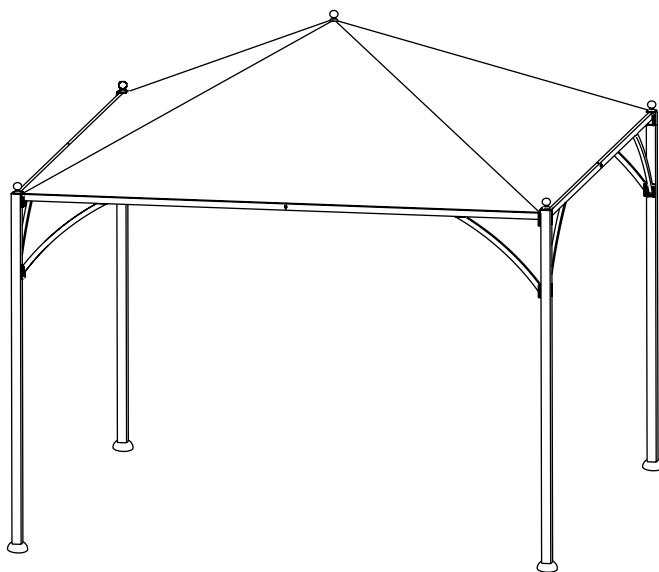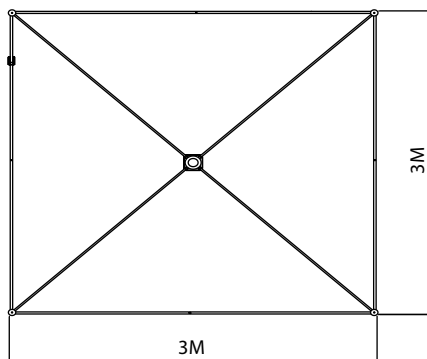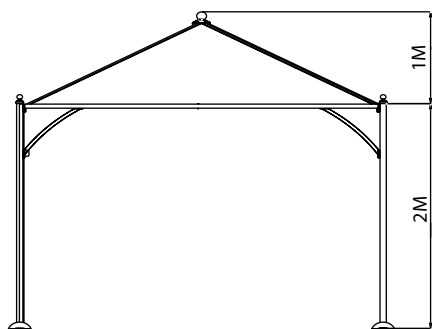


Framework Assembly

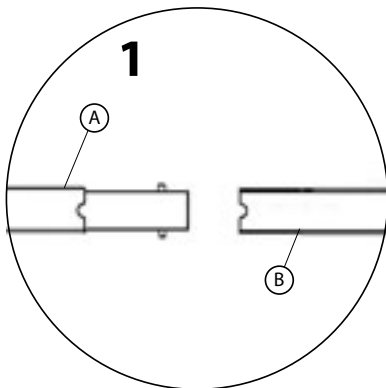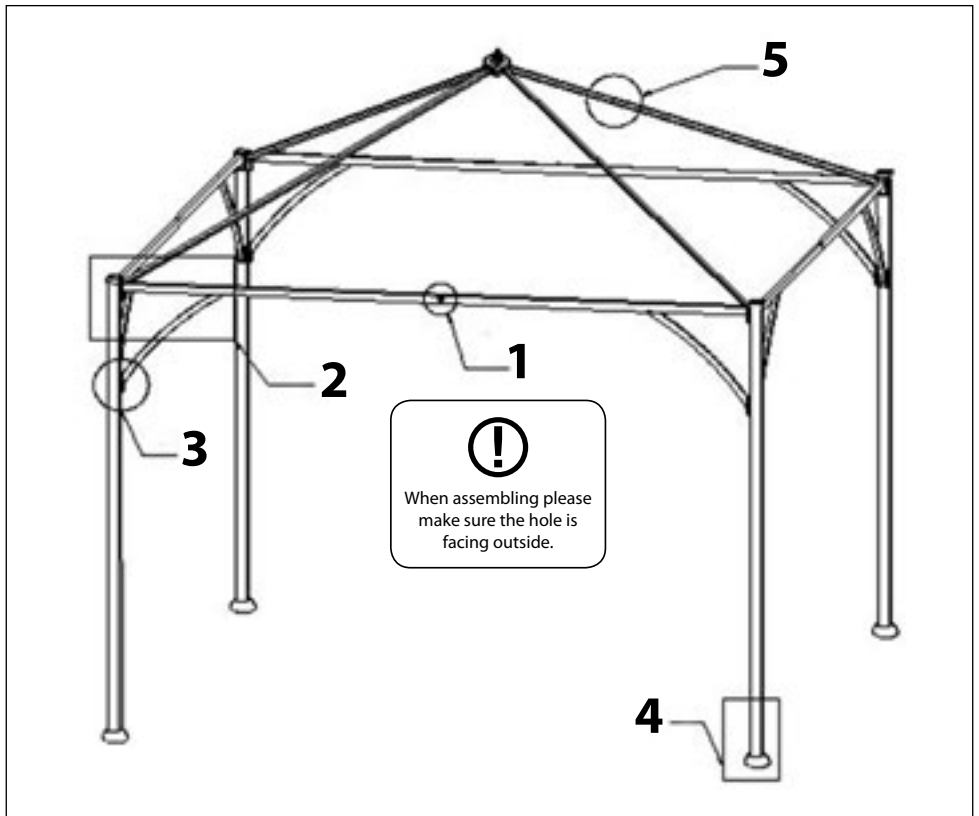


Main Frame

Insert A into B ensuring both end fixing plates are facing downwards (see step 3) and screw hole facing outwards (required at a later stage). Repeat 4 times.


Framework Assembly

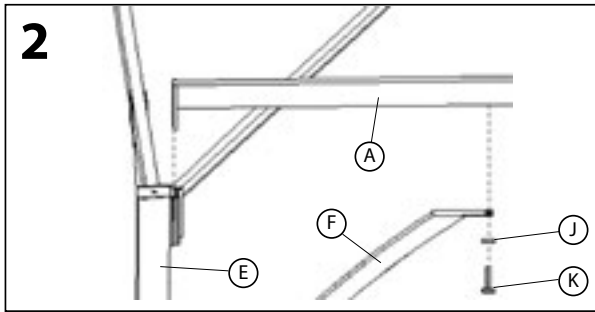


Insert A/B into E and repeat 4 times whilst supporting frame.

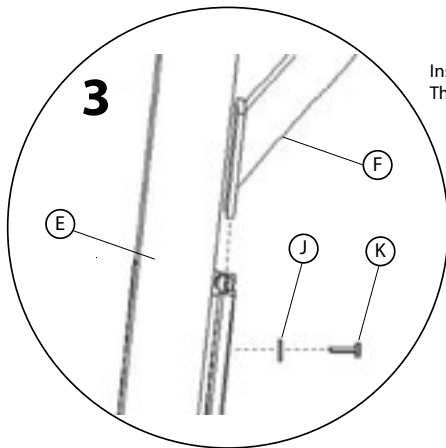

Insert F into E first and secure with J & K. Then secure F into A/B with J & K.


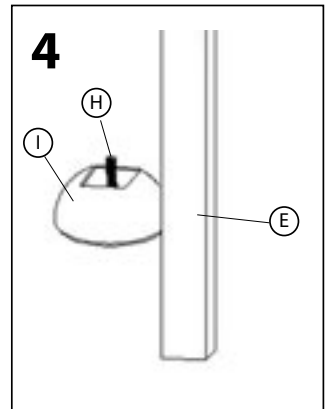


Slide I up E first. Fix H to underside of E.

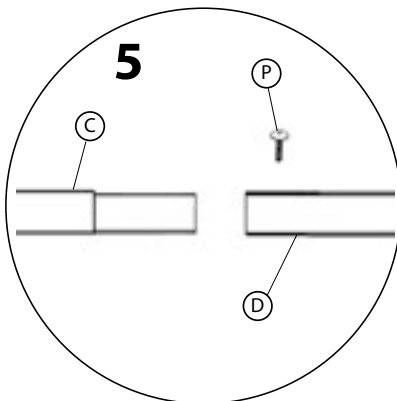


Insert C into D ensuring end fixing plates are facing downwards (see step 6).

Roof Framework

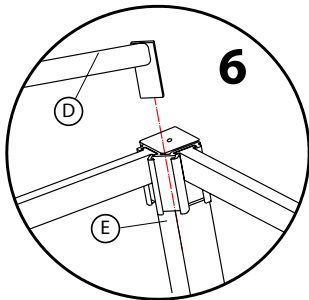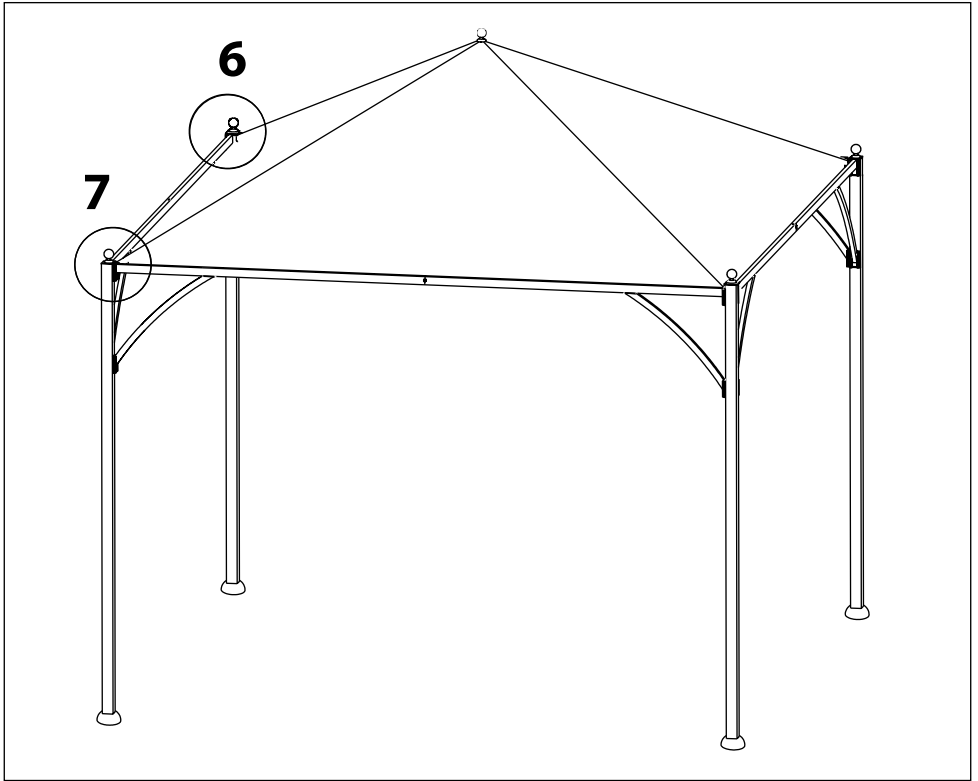


Once step 6 is complete, remove roof finial, loosely hang canopy, refit finial. Continue to step 7.

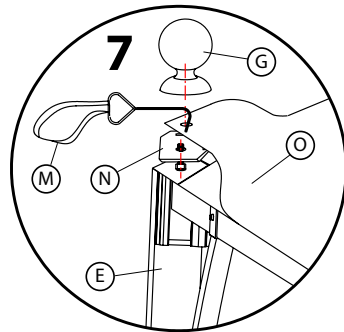






Securing Canopy

Fit plate (N), making sure it is the right way round, pull canopy tight using (M) and secure with finial (G). Repeat 4 times. And then Velcro to underside of A/B.

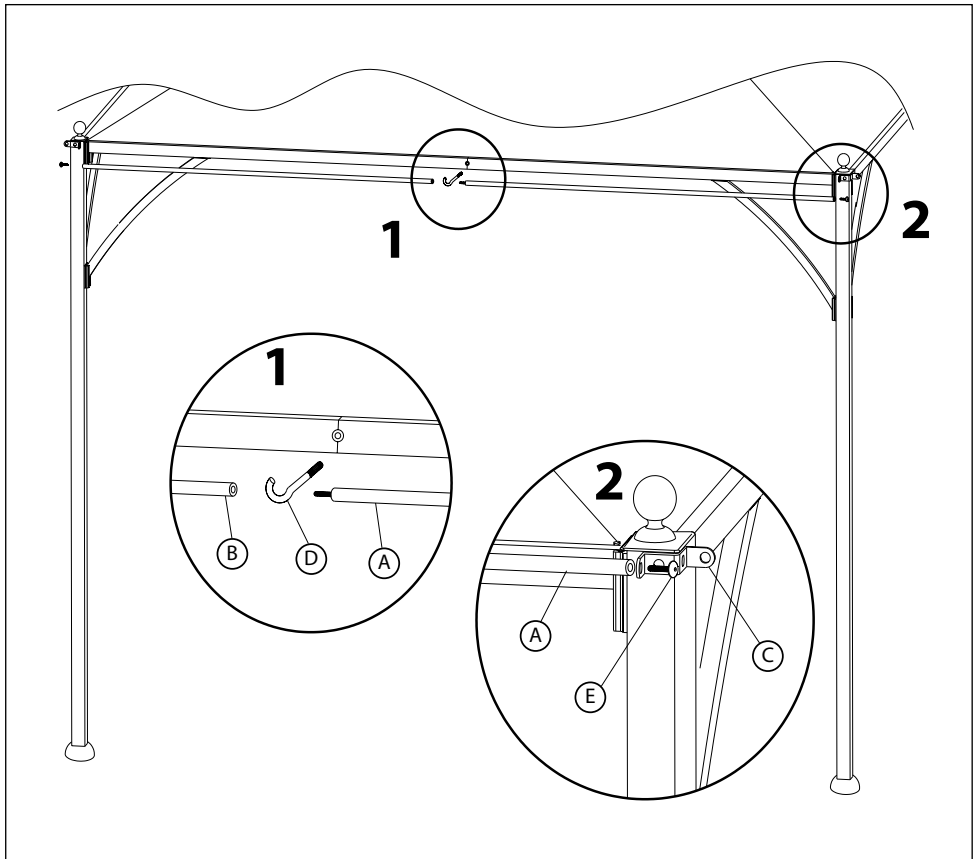Curtain / Side Rail Assembly

  

Curtain/Side Rail Parts List

(A) x4			
(B) x4			
(C) x4	(D) x4	(E) x16	
			

For Your Safety

- This product may only be used for its intended purpose as furniture for residential properties.
- Check all components regularly for correct function, damage and loose connections especially at the start of the season and at 1-2 month intervals dependent on use.
- Damaged components may endanger your safety or shorten the life of the product. Replace all damaged parts immediately. Use only spare parts manufactured by Kettler. Should you wish to purchase spare parts, they can be ordered directly from: www.kettler.co.uk/shop
- Kettler will not be responsible for damaged caused by improper use.



Attention

- Whilst assembling this product keep out of the reach of children. (Choking hazard – contains small parts)
- Ensure that your working area is free of possible sources of danger, for example don't leave any tools lying around.
- Always dispose of packaging material in such a way that it may not cause any danger. There is always a risk of suffocation if children play with plastic bags!
- We reserve the right to make changes for technical reasons.

KETTLER

Kettler GB Limited,
Merse Road, North Moons Moat,
Redditch, Worcestershire,
B98 9HL



www.kettler.co.uk



Warranty For Home Use

KETTLER furniture is covered by a 5 YEAR ANTI RUST WARRANTY against rust causing failure.

The warranty applies to domestic use only. If the product is damaged or chipped, rust may occur, and will not be covered by this warranty. If a product is accidentally damaged you can obtain touch up paint from our website www.kettler.co.uk

No warranty claims can be accepted without a valid proof of purchase.